 


# TEAM LOSI MICRO-T



**1/36-SCALE READY-TO-RUN ELECTRIC MICRO TRUCK**



- 
- |  |   |
|--|---|
| LOSB0802 Micro-T Transmitter               | LOSB1512 Slipper & Spur Gear Set          |
| LOSB0803 Micro-T RX/ESC                    | LOSB1514 Diff Gear Set                    |
| LOSB0817 Micro-T Servo w/Servo Saver       | LOSB1515 Complete Diff-Assembled          |
| LOSB0833 Micro-T Motor w/Wires             | LOSB1517 Driveshaft & Outdrive Set        |
| LOSB0848 Micro-T Battery Pack              | LOSB1518 Driveshafts (2)                  |
| LOSB0849 Micro-T Charger                   | LOSB1520 Pinion Gear Set (10,12,14T)      |
| LOSB0860 Connector Set w/wire              | LOSB1522 Shock Set                        |
| LOSB1500 Chassis Set                       | LOSB1524 Screw Set                        |
| LOSB1502 Susp. Arm, Spindles, Hubs, Towers | LOSB1525 Body Clip Set Large & Small (10) |
| LOSB1503 Suspension Mt & Bumper Set        | LOSB1528 Wheel & Hub Bearing Set (8)      |
| LOSB1504 Steer & Camber Link/Saver Set     | LOSB1530 F&R Wheels & Tires               |
| LOSB1505 Suspension Hardware Set           | LOSB1540 Micro-T Body Blue w/stickers     |
| LOSB1510 Transmission Set                  | LOSB1541 Micro-T Body Red w/stickers      |
| LOSB1511 Complete Trans - Assembled        | LOSB1542 Micro-T Body Green w/stickers    |



# Getting Started



1. Your Micro-T includes 2 complete sets of Batteries. The Heavy Duty non-alkaline batteries are to be used in the transmitter.



3. Plug the battery lead into the charger lead. The RED Led will light up and stay solid while charging. When the battery is fully charged the light will shut off (approximately 20 minutes). If the charger light only lights up for about a minute, the AA batteries inside the charger are low and should be replaced.



5. Plug in the battery lead into the speed controller lead and replace the body. Secure the body with the included body clips.



7. Once the transmitter has been turned on, turn on the Micro-T by sliding the switch to the "On" position (located on the bottom of the chassis). If the rear wheels turn, adjust the "TH. Trim" knob located to the lower right of the steering wheel until they stop. To go forward pull the trigger back. If you should need reverse, wait for the model to stop then push the trigger forward. When going forward the model should move in a straight line. If not, adjust the "ST.Trim" so that it tracks in a straight line without having to turn the steering wheel. After you are done running, turn the Micro-T off FIRST by sliding the switch to the "Off" position. After the model has been turned off, turn off the transmitter.

Charger



2. Remove the battery cover by sliding the cover in the direction noted on the cover. Install (8) AA alkaline batteries into the bottom of the charger. Pay close attention to the correct direction of the positive (+) and negative(-) ends as marked. Reinstall the battery cover.



4. Remove the transmitter battery cover by sliding the cover in the direction noted on the cover. Install eight (8) AA batteries into the battery holder. Pay close attention to the correct direction of the positive (+) and negative (-) ends as marked. Once all 8 batteries have been installed, reinstall the battery cover.



6. ALWAYS turn on the transmitter first by sliding the switch "ON". The small red and green lights above the switch should both light up. If not you need to check for low or incorrectly installed batteries.